

EN

USER
MANUAL











Comelit 1.0 application
available on App Store and Google Play



 **Comelit**[®]
Passion. Technology. Design.

Table of contents

Introduction	2	Advanced configurations	11
Smart Registration	3	Add an entry to the Directory	11
Use	4	Delete an entry to the Directory	12
Key to keys	4	USER ADMINISTRATION []	13
MENU	4	Access to the administration area	13
Systems management	4	System password change	13
HOME []	5	User activation/deactivation	13
DOOR ENTRY MONITORS []	6	Adding new user	14
Perform an action on an element in the directory.....	6	ADVANCED SETTINGS []	15
Scroll through the directories (Android only).....	7	Virtual buttons programming	15
Switch to full screen view	7	Bitrate.....	15
Directory image customization	8	Device manual configuration	16
MESSAGES []	8		
ACTUATORS / LOCK-RELEASE [ / ]	9		
SETTINGS []	10		
Ringtone setting.....	10		
Video recording settings.....	10		
Widget.....	10		

This document may not be reproduced, even in part, without the express written consent of **Comelit Group spa.**
The brands and commercial names appearing in this publication remain the property of their respective owners.

The **Comelit** App is supported by devices with iOS 10 (or later) and by the most common Android devices with Android version 4.3 or higher, however some functionalities may be limited depending on the model and the version.


Introduction

The Comelit application installed on smartphones or tablets allows you:

- *to receive audio and video calls from external unit*
- *to make intercom calls with other internal devices*
- *view (or record) videos from external units and remote camera*
- *to record video messages on missed calls*
- *to activate actuators*
- *to manage/configure multiple systems*





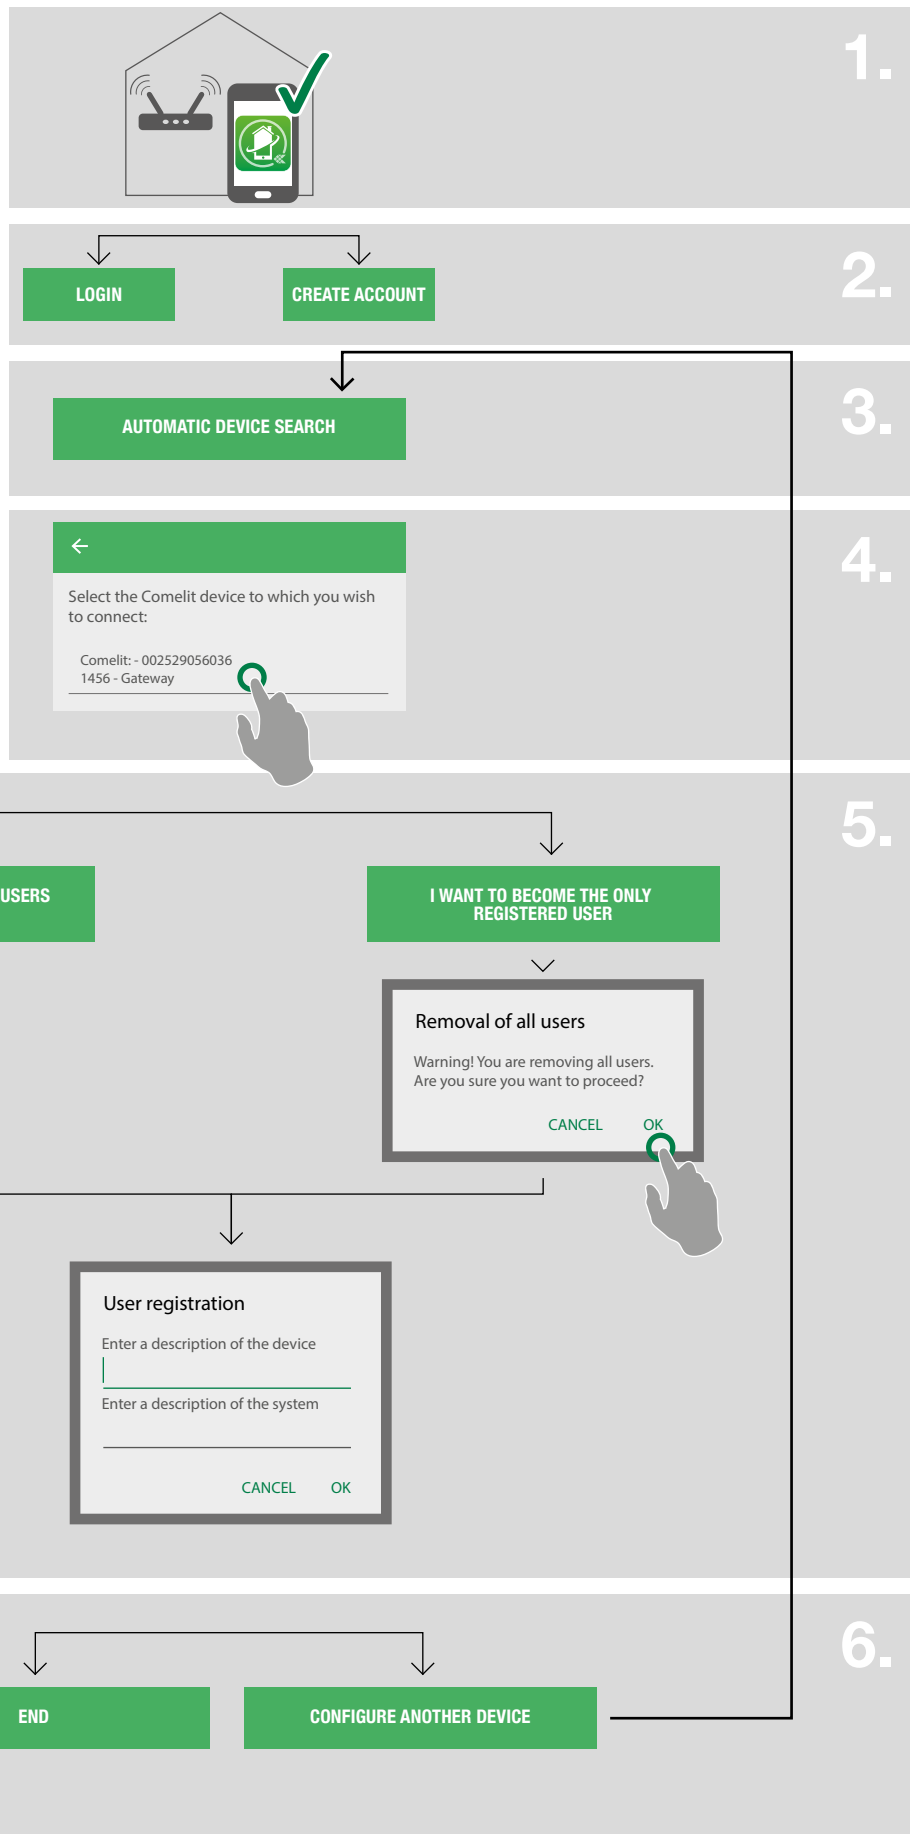

Smart Registration

1. Install the **Comelit application**, connect to your home network and open the application.
2. **Login** if you already have a Comelit account or **create a new account**.
3. Select **“Automatic device search”**.
4. Select your Comelit device.
5. Choose whether you wish to be added as a **new user** or if you want to be registered as the **only user** (thereby deleting all previously registered users) and follow the instructions on the screen to complete registration.
6. Choose whether you wish to end the configuration process or register another system.











Use

Key to keys

-  Press to open the navigation menu
-  Press to return to the previous screen
-  Press to add a new element
-  Press to cancel/end the current operation
-  Press to edit the selected element
-  Press to delete the selected element

MENU

From the menu page you can access all available functions and manage the systems.

-  HOME *Press to quickly access the most used functions*
-  DOOR ENTRY MONITORS *Press to access the directories and video entry monitor functions*
-  MESSAGES *Press to view the recordings and messages in the video memory function.*
-  ACTUATORS* *Press to display the actuators that can be controlled*
-  LOCK-RELEASE* *Press to display the entrances that can be controlled*
-  USER ADMINISTRATION *Press to access the users configuration*
-  SETTINGS *Press to set ringtones, video recordings, widgets and advanced configurations*
-  LOGOUT *Press to disconnect the user*

* Visible only if the directories customization is allowed or if there is at least one entry in the directory.


Systems management

► From the pull-down menu choose **“Manage systems”**

If you want to enable/disable notifications: use the specific selector **[A]**


If you want to change the name or delete the configuration of a system: Press and hold on a section of the directory to activate the entry delete and edit keys **[B]**

If you want to add a new system: press  **[C]**

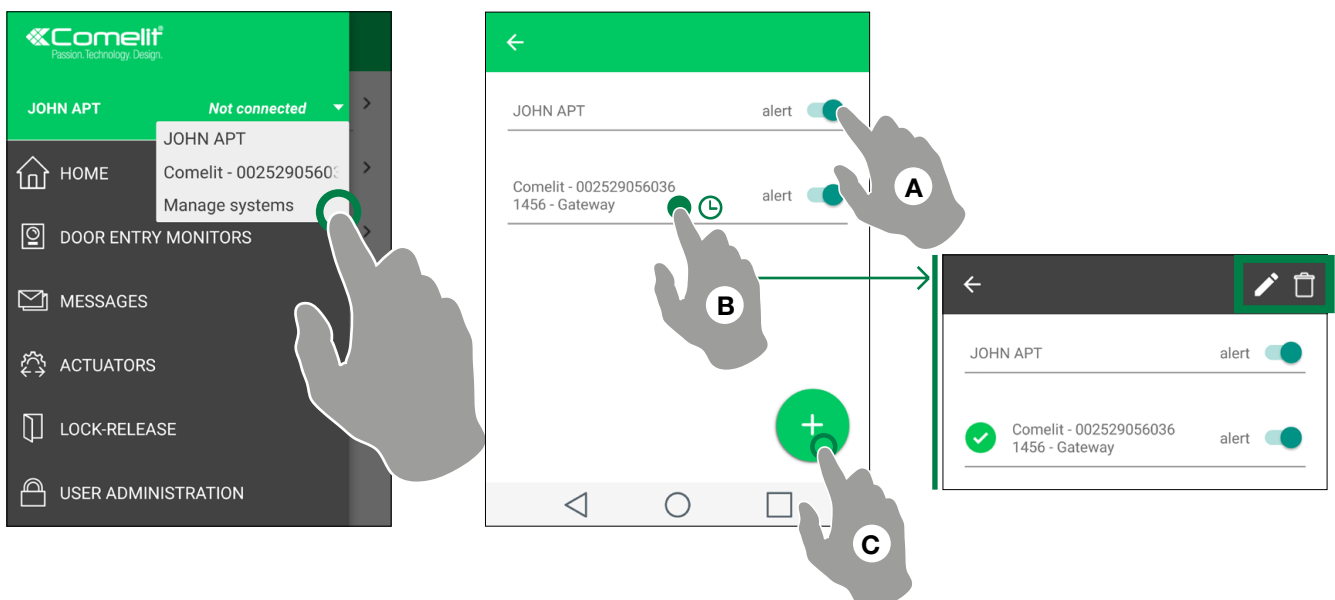

HOME []

The home page provides quick access to the most common commands and to view the notifications in memory. You can customize the home page from the settings (see **"Widget"**).

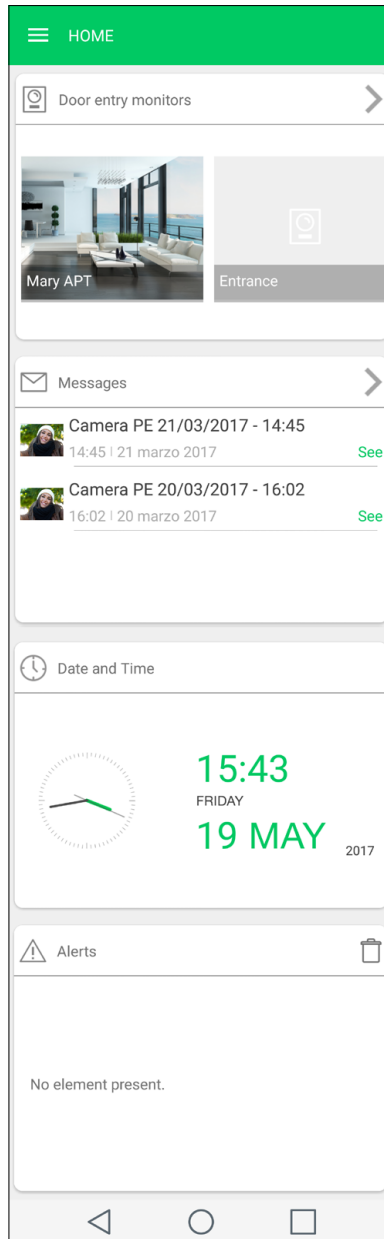


DOOR ENTRY MONITORS []







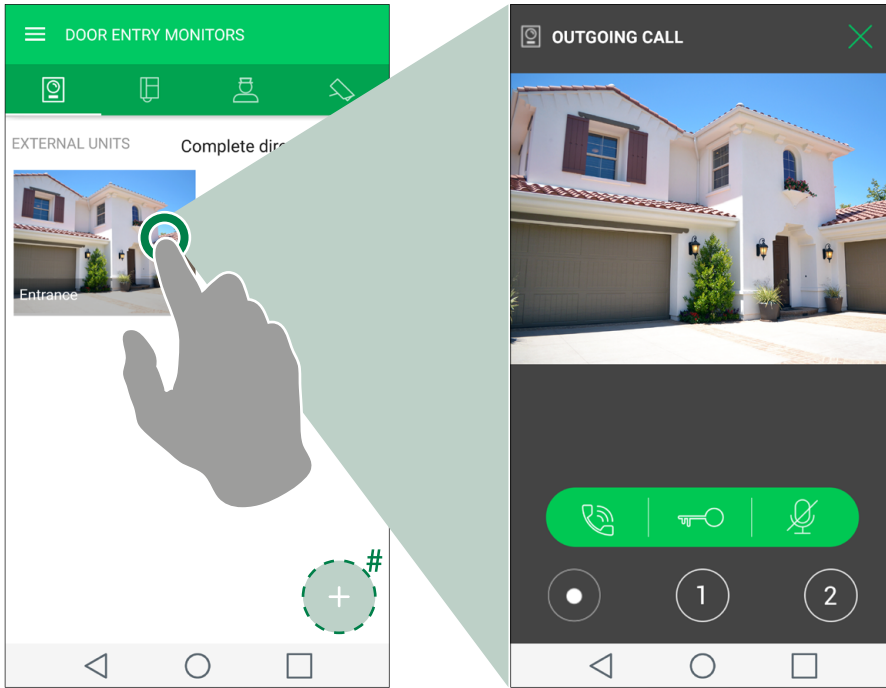






In the door entry monitors section, the following functions are available: self-ignition of an external unit, intercom call, call to a switchboard, camera switch on.

Perform an action on an element in the directory


► Touch an element in the directory to control the desired action (see table)




 # Optional. Visible only if the directories customization is allowed (see [“Add an entry to the Directory”](#))

Functions		FUNCTIONS AVAILABLE FOR EACH DIRECTORY			
					
		<i>External unit self-ignition</i>	<i>Intercom call</i>	<i>Secondary switchboard</i>	<i>Camera activation</i>
 <p>reply</p> <p>► press to enter in communication with the calling subject</p>	 <p>call closure</p> <p>► press to end the call</p>	✓	✓	✓	
 <p>lock-release</p> <p>► press to activate the door lock of the interlocutor external unit</p>		✓			
 <p>microphone deactivation</p>	 <p>microphone activate</p>	✓	✓	✓	
 <p>start video recording</p>	 <p>stop video recording</p>	✓			✓
 /  <p>virtual button 1/2</p> <p>► press to command the programmed action (see “Virtual buttons programming”)</p>		✓	✓	✓	✓


Scroll through the directories (Android only)

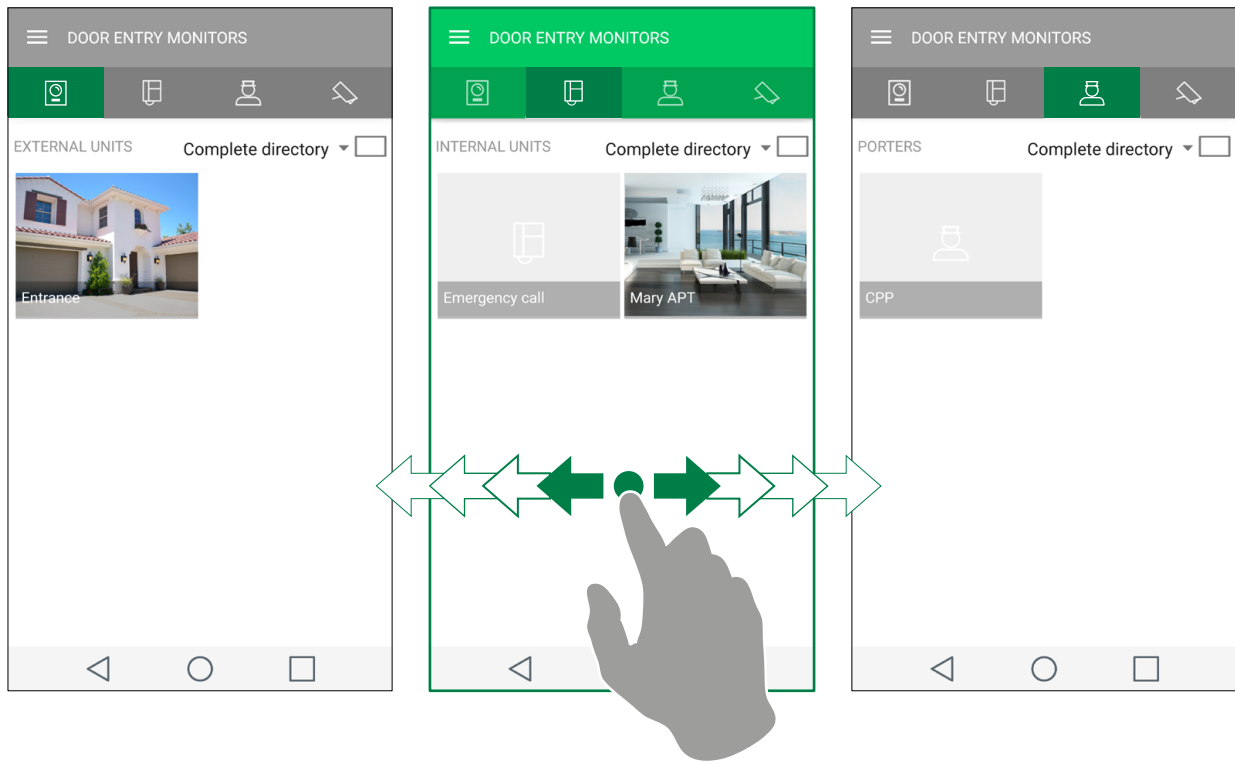


Switch to full screen view

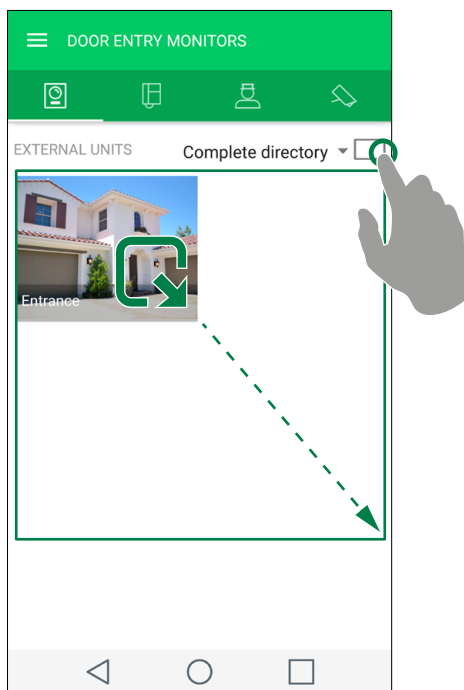


Directory image customization


1. Press and hold the desired item to activate the edit buttons.
2. Press  to access the editing page.
3. Press the “image” icon, search for the desired photo in the memory of your device, and save.

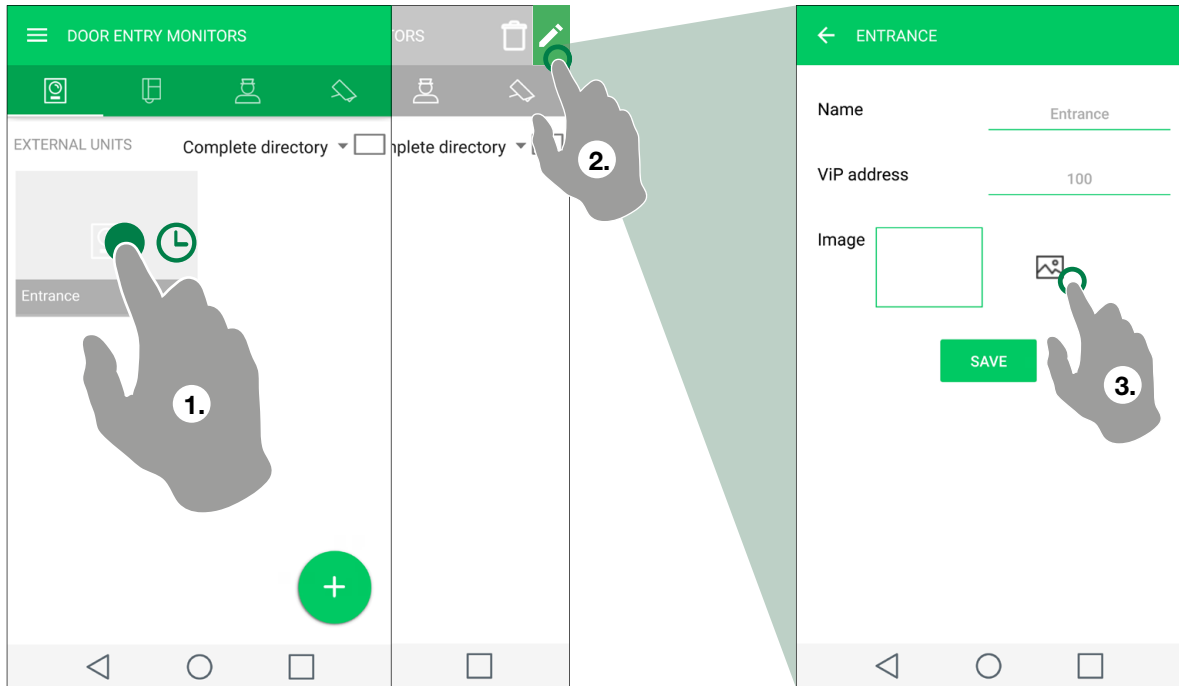

MESSAGES []

In the Messages section, you can view and delete the recordings made (from external unit and remote camera) and the messages in the video memory function.


1. Enter the Messages/Video memory function page
 2. Press the video you want to display to start the playback.
- Press  to delete an element in the video memory.

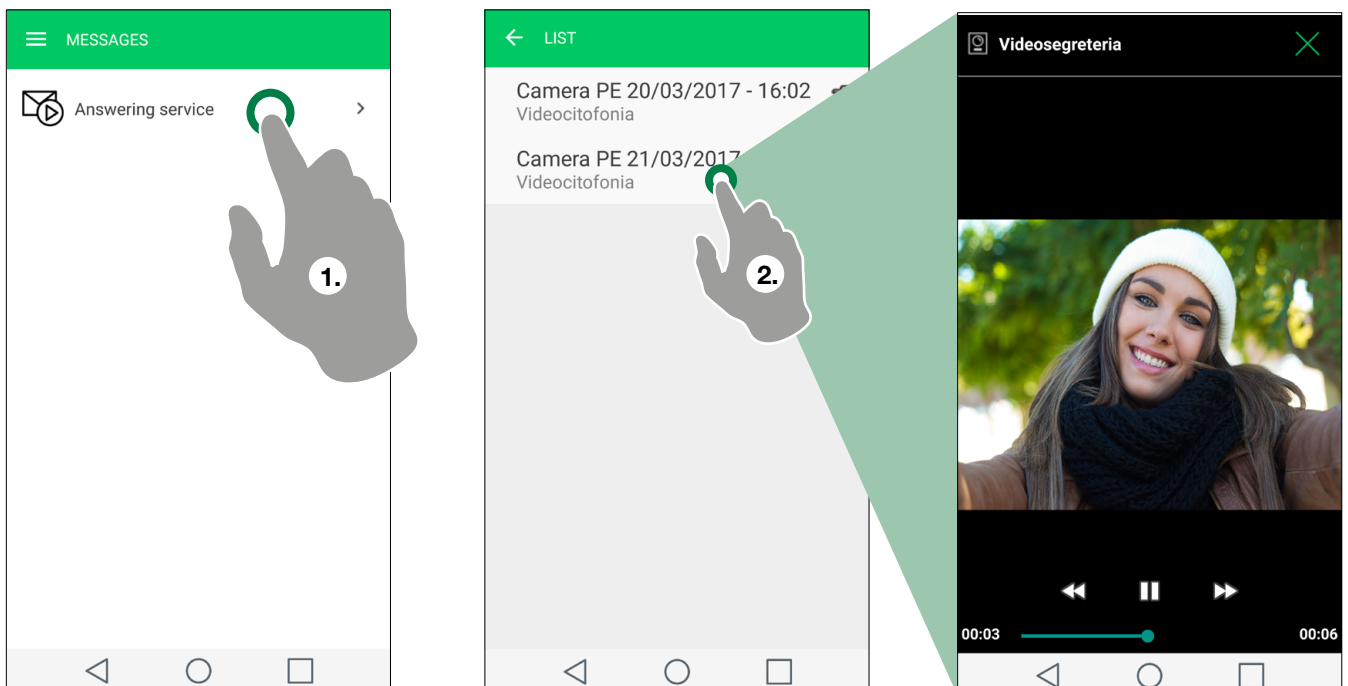

ACTUATORS / LOCK-RELEASE [/]

This section provides a list of actuators/lock-release controls

- ▶ Touch the element to activate it

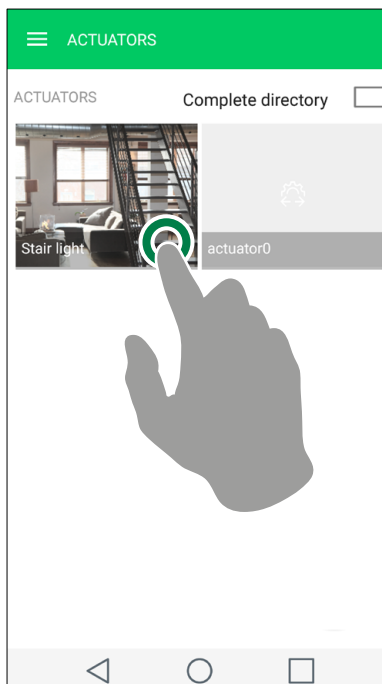

For more viewing and customization modes, see:

[“Switch to full screen view”](#),

[“Directory image customization”](#)

SETTINGS []

Ringtone setting

From the Settings/Ringtone Settings page, you can customize the ringtone for: *Outgoing Call, Intercom Call, Alarm, Group Call, Notifications.*


Video recording settings

From the Settings/Video recording settings page, you can enable/disable the missed call recording and set the length of the recording (to choose between: 5/10/20 seconds).

Widget

From the Settings/Widget page you can choose what to make visible on the home page and set the order of the elements.


1. Tick the elements that you want to make visible in home. For Door entry monitor, Actuators and Camera enter the submenu to select the individual devices/actuators.
2. Drag the elements in the desired order.

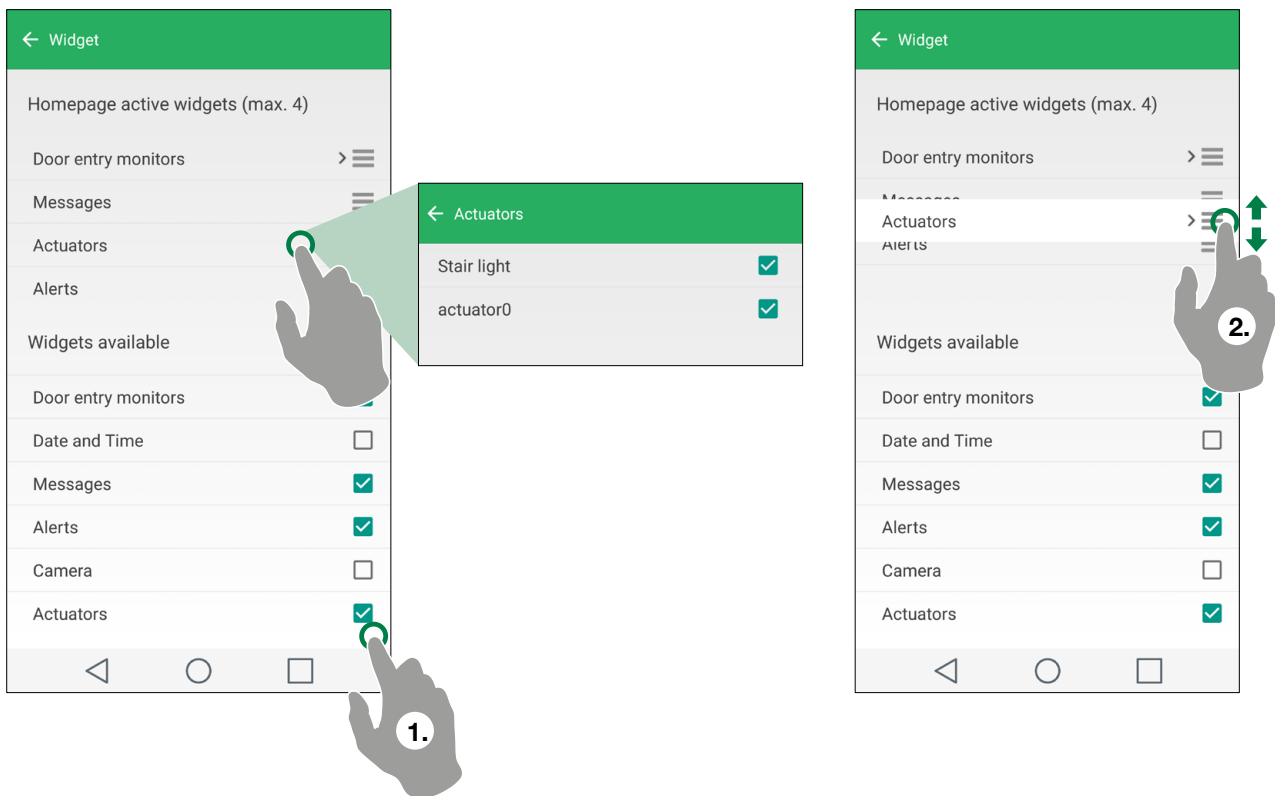

Advanced configurations


Add an entry to the Directory


- ▶ Press and complete the required fields (see table) to add an entry to the directory.

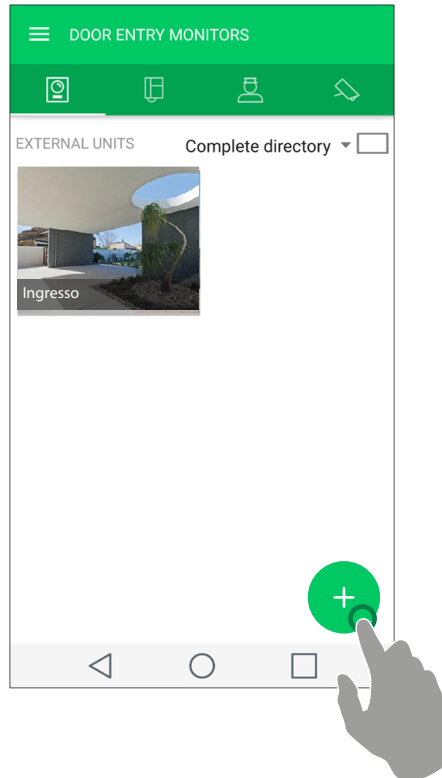

	<p>Name: enter the description.</p> <p>ViP address: enter the ViP address.</p> <p>Image: see “Directory image customization”</p>
	<p>Name: enter the description.</p> <p>ViP address: enter the ViP address</p> <p>Slave: from the pull-down menu, choose whether to configure a call to the entire apartment or only to the master monitor or to a slave monitor, as required.</p> <p>Image: see “Directory image customization”</p>
	<p>Name: enter the description.</p> <p>ViP address: enter the ViP address</p> <p>Image: see “Directory image customization”</p>
	<p>Name: enter the description.</p> <p>ViP address: enter the ViP address</p> <p>Slave: select the desired camera from the pull-down menu.</p> <p>Image: see “Directory image customization”</p>
	<p>Name: enter the description.</p> <p>ViP address: enter the ViP address</p> <p>Relay: Enter the number of the actuator module (choose between “onboard” or from 1 to 10).</p> <p>Expansion: Enter the number of the relay (1 or 2) or the expansion number (from 1 to 10) that you wish to control.</p> <p>Image: see “Directory image customization”</p>
	<p>Name: enter the description.</p> <p>ViP address: enter the ViP address</p> <p>Relay: Enter the number of the output you want to control.</p> <p>Image: see “Directory image customization”</p>

Delete an entry to the Directory

1. Press and hold the desired item to activate the delete button.
2. Press  to delete the element.

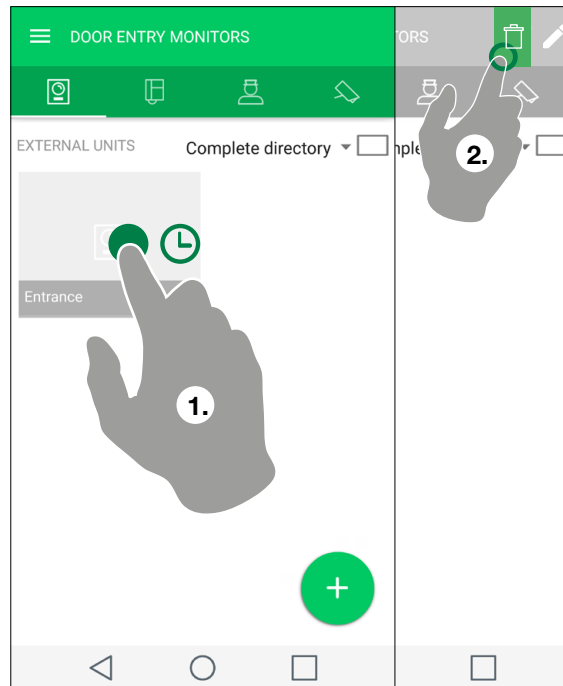

USER ADMINISTRATION []

From the User Administration page you can change the system password, enable/disable a user, add/delete/edit a registered user/device.

Access to the administration area


- ▶ From the “User Administration” main menu, complete the required fields (with the data provided by your installer) to access the administration area.

only with multi-apartment gateway Item 1456B

* with single-apartment gateway, the default password is **admin**


System password change

- ✓ After accessing the user administration area (see: ["Access to the administration area"](#)).
- ▶ Press the “key” button and follow the instructions that appear on the video to change the system password.

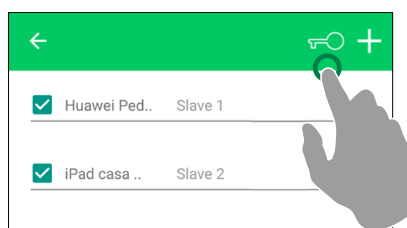

User activation/deactivation

- ✓ After accessing the user administration area (see: ["Access to the administration area"](#)).
- ▶ Activate/deactivate an already registered user to the system by selecting/deselecting it.


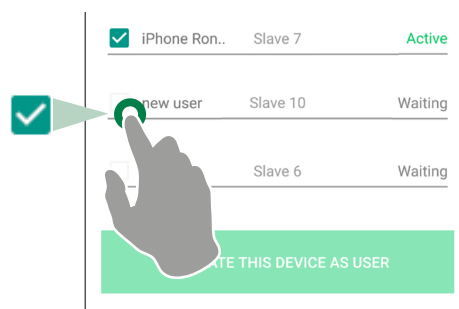


Adding new user

This function allows you to add a new user unconnected to your home network (useful if you want to allow access to your system to friends/relatives)

✓ After accessing the user administration area (see: [“Access to the administration area”](#))

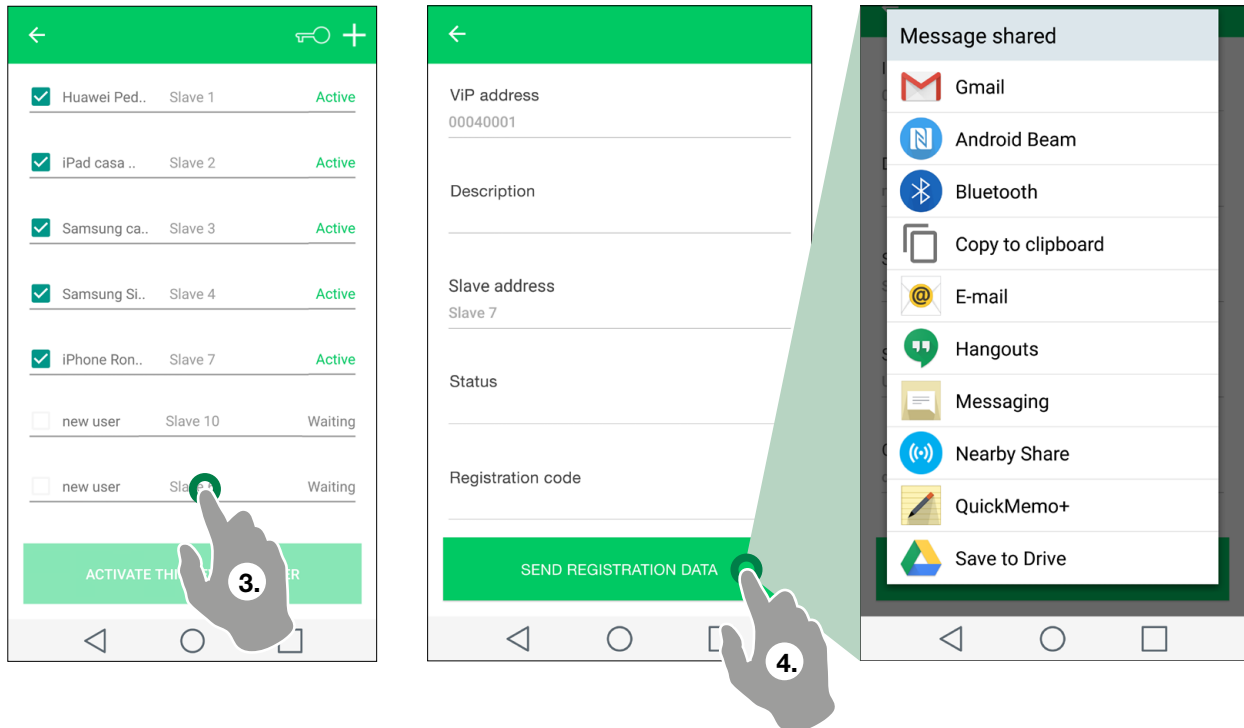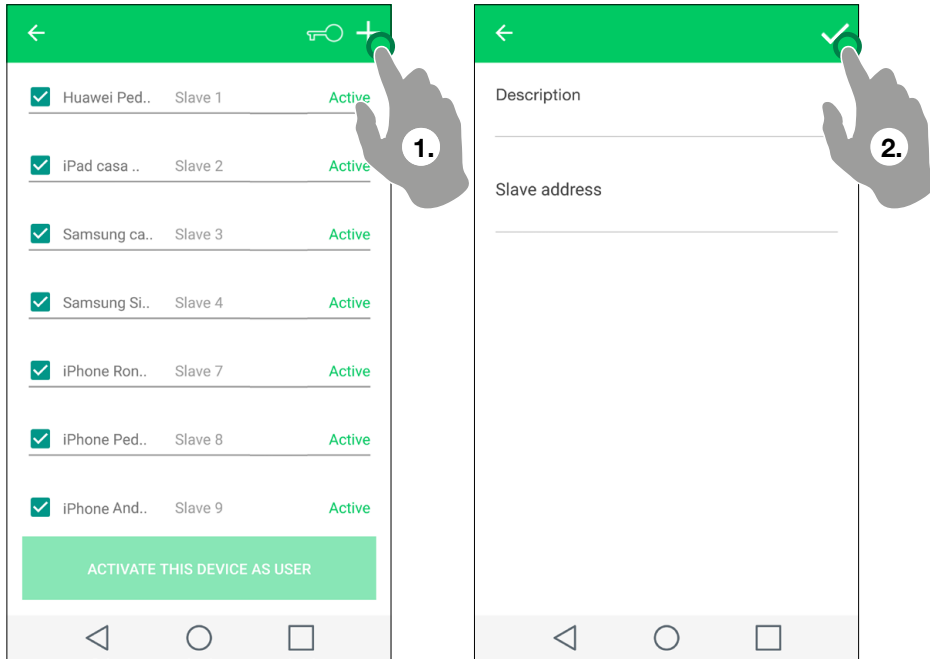


1. Press **+** to add a new user.
2. Complete the description field, choose an available slave and confirm.
3. From the user list, press the newly entered user to access the registration data.
4. Send the recording data (.mug file) pressing the **“send registration data”** button.
 - » the new user must install the Comelit application and open the .mug file received, to complete the registration procedure.



ADVANCED SETTINGS []

Virtual buttons programming


From the Settings/Advanced Settings/**Virtual buttons** page you can configure the key button and the virtual buttons 1 and 2.

	<p>LOCK-RELEASE FUNCTION CONFIGURATION</p> <p> Action 1 during call</p> <p><input checked="" type="checkbox"/> Automatic Directory</p> <p>The key button commands the action configured in the directory through ViP Manager (in Lock-release Actions), deselect “Automatic Directory”, if you want to customize the operation.</p> <p>Action 1 calling / Action 2 calling: choose the option you want between</p> <ul style="list-style-type: none"> • None: to disable the button • Intercom: to control the relay of the external unit in communication • Other external unit: to command a specific relay of another external unit <p>Select external unit (visible only for Action 1/2 in call: Other external unit): select the desired external unit.</p> <p>Relay: enter the number of the output from 1 to 3 that you wish to control (relay 3 is available only for device 3454S)</p> <p>ACTUATOR FUNCTION CONFIGURATION</p> <p>Actuators: select the actuator that you want to command.</p>
<p>1</p> <p>2</p>	<p> Action 1 during call</p> <p><input checked="" type="checkbox"/> Automatic Directory</p> <p>The button 1 commands the first action that is configured in the directory through ViP Manager (in Additional actuators), deselect “Automatic Directory”, if you want to customize the operation.</p> <p>Function: choose the option you want between</p> <ul style="list-style-type: none"> • Lock-release with manual configuration: To manually configure the lock-release key as described for the key button (see line above). • Lock release and actuators: to select an element in the directory. • None: to disable the button.

Bitrate

From the Settings/Advanced Settings/**Bitrate** page it is possible to adjust video streaming quality via the bitrate (Kilobits transmitted per second).

1. Enable the Video Signal Bitrate editing.
2. Press the current value and enter the desired value.

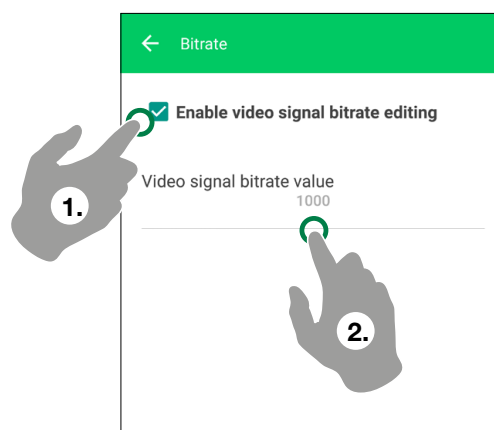

Device manual configuration

1. Install the **Comelit application**, connect to your home network and open the application.

2. **Login** if you already have a Comelit account or **create a new account**.

3. Choose **“Manual configuration”**.

4. Complete the required fields and confirm (as **IP address**, enter the public IP address or hostname provided by your installer).

5. Choose whether you want to register as **user** or access as **apartment administrator** (special user who can configure new users) enter the data provided by your installer and press **“Access”** to complete the recording.

In case of access as administrator:

- the first time you access, you will be asked to set a new password
- it is necessary to select **“activate this device as user”** to access all the functionalities of the application.

6. Choose whether you wish to end the configuration process or register another system.

